




"ARCTIC CHILL GLYCOL"

INSTALLATION AND SERVICE MANUAL

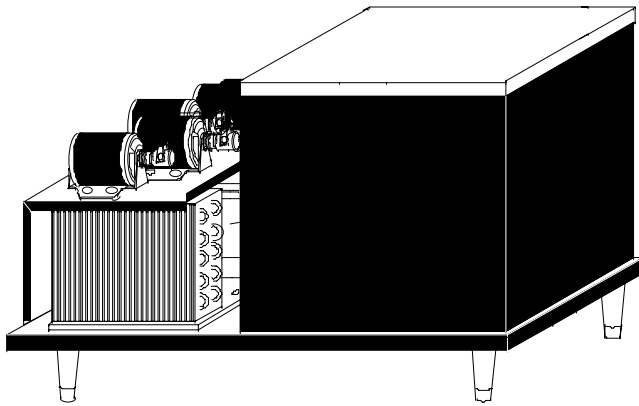

HORIZONTAL ARCTIC CHILL GLYCOL

VERTICAL ARCTIC CHILL GLYCOL

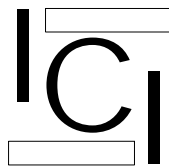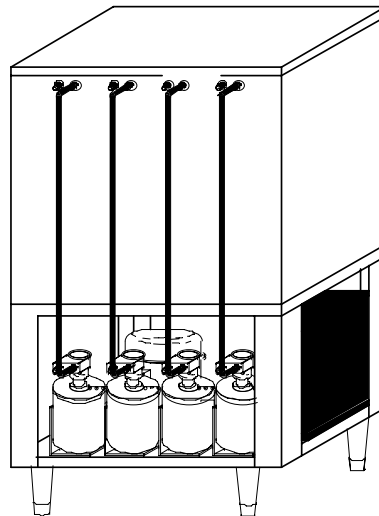

"SODA-FAST SYSTEMS FOR EVERY APPLICATION AND USE"

INTERNATIONAL CARBONIC INC.

16630 KOALA RD., ADELANTO, CA 92301

(800) 854-1177 * FAX (760) 246-4044

IMPORTANT: This manual is a guide for installing, operating, servicing and maintaining this equipment. Refer to Table of Contents for page location of detailed information to answer questions that arise during installation, operating, service and maintenance, or installation of this equipment.

TABLE OF CONTENTS

	PAGE
PREFACE	1
CHAPTER I <u>GENERAL DESCRIPTION</u>	2
SYSTEM DESCRIPTION.....	2
SPECIFICATIONS VAC-1-GLY	3
SPECIFICATIONS HAC-1-GLY	4
EXPLODED VIEW VAC-1-GLY	5
DESCRIPTION EXPLODED VIEW VAC-1-GLY	6
EXPLODED VIEW HAC-1-GLY	7
DESCRIPTION EXPLODED VIEW, HAC-1-GLY	8
ELECTRICAL SCHEMATIC AC-I-GLY	9
CHAPTER II <u>INSTALLATION</u>	10
UNPACKING AND INSPECTION	10
SELECTING LOCATION	10
LOCATION RECOMMENDATIONS FOR ARCTIC CHILL.....	10
INSTALLATION.....	11
INSTALL PRESSURE CO2 REGULATOR, CO2 CYLINDER AND LINES	11
INSTALL DRAIN LINE	11
INSTALL DISPENSING STATIONS	11
INSTALL DUCT TUBING	11
ELECTRICAL REQUIREMENTS	12
CHAPTER III <u>PREPARATION</u>	13
PREPARING SYSTEM FOR OPERATION	13
PREPARING AND STARTING REFRIGERATION UNIT	13
DIRECTIONAL FLOW OF GLYCOL.....	14
DIRECTIONAL FLOW OF GAS OR AIR	14
ACTIVATE HIGH PRESSURE CO2 SYSTEM	14
ACTIVATE LOW PRESSURE CO2 GAS AND SYRUP SYSTEMS.....	14
PURGE DISPENSING STATION	15
ADJUST DISPENSING FAUCET FLOW RATE	15
ADJUST SIZE OF DRINK DISPENSED	15
CHAPTER IV <u>OPERATORS INSTRUCTIONS</u>	16
DAILY PRE-OPERATION CHECK	16
REPLENISHING CO2 SUPPLY	16
COOLING UNIT MAINTENANCE	16
CHECKING GLYCOL BATH.....	16
CHANGING GLYCOL BATH	16
ADJUSTMENTS.....	16
TESTING FOR LEAKS	17
CHAPTER V <u>SERVICE AND MAINTENANCE</u>	18
PERIODIC INSPECTION AND CLEANING.....	18
COOLING UNIT MAINTENANCE	18
CLEANING CONDENSER COIL	19
CHECKING/CHANGING GLYCOL BATH	19

GLYCOL PUMP REPLACEMENT	20
LUBRICATION	21
ADJUSTMENTS.....	21
CO2 PRESSURE REGULATOR	21
LOW PRESSURE CO2 REGULATOR	21
REPLENISHING CO2 SUPPLY	21
CHAPTER VI <u>TROUBLESHOOTING</u>	23
COOLING UNIT	23
GLYCOL PUMP MOTOR WILL NOT OPERATE	23
GLYCOL PUMP CAPACITY TO LOW.....	23
FROZEN GLYCOL BATH	23
COOLING OR CONDENSING UNIT NON-OPERATIONAL	23
COMPRESSOR DOES NOT OPERATE	24
COMPRESSOR WORKS CONT. BUT DOES NOT COOL SUFFICIENTLY	24
COMPRESSOR WILL NOT STOP AFTER SUFFICIENTLY COOLING GLYCOL SOLUTION	24
CONDENSER FAN MOTOR NOT OPERATING	24

PREFACE

INTERNATIONAL CARBONIC INC. has enjoyed over 53 years of manufacturing excellence in the field of carbonation and in the beverage related industry. We have had a long and proud history with quality as our standard and innovation as our goal. Originally started just after World War II in Canfield, Ohio as Carbonic Dispensers. We enjoyed patents on the first Sodajet type carbonator. This method of carbonation instantaneously carbonated the water to 100% saturation. We developed the first patented dispensing valve to dispense bulk beverage with carbonation equal to or in excess of bottled beverages. A valve with three flavors and soda was another first. We were the first to incorporate the total postmix package, i.e., carbonation, refrigeration, and the ability to dispense from one self contained unit. We have pioneered many such firsts and will continue to develop advanced systems for the future, such as electronic interrogatable portion controls to electronic liquid level controls.

We hope you enjoy this piece of equipment that has been produced to give many years of trouble free service. We thank you for your purchase and hope we may serve you in the future.

CHAPTER I


GENERAL DESCRIPTION

This chapter gives the description, theory of operation, and design data for the Arctic Chill GLY, and related components.

SYSTEM DESCRIPTION

The ARCTIC CHILL GLYCOL, AC-1-GLY, is a completely self-contained remote cooling unit with a one-horse power condensing unit. The unit can be manufactured in two configurations, i.e., vertical or horizontal. The unit will be identified as VAC-1-1-GLY if vertical and HAC-1-1-GLY if horizontal. The AC-1-1-GLY can hold up to 4 motor and pumps for individual ducts going to individual serving stations. As an example a vertical Arctic Chill with 4 motors would be identified VAC-1-1-GLY-Q, Q standing for quad. If two motors the I.D. will be D for dual and if 3 motors T for triple. For the rest of the manual the AC-1-1-GLY will be referred to as a single motor unit or simply AC-1-1-GLY. The AC-1-1-GLY is a unit containing a refrigeration system/evaporator, water/glycol bath, temperature control, pump(s), and motor(s). The refrigeration system evaporator is located in the bath section of the unit. The bath section of the unit will hold a solution of water/glycol. This solution of glycol will be cooled by the evaporator to a temperature of approximately 24 to 30 degrees. This temperature may vary and is adjustable depending on requirements.


This cooled solution will be routed through a duct line(s), by a pump(s) and motor(s). This duct line will contain a continuous outgoing and incoming tube, which will carry the cooled glycol solution to the dispensing station/s and then back to the AC-1-GLY. This duct line will also consist of line/s to carry alcoholic based beverages to the dispensing station/s. The beverage line/s will be nested in between the outgoing and incoming glycol line. This cooled glycol solution in close proximity to the beverage line/s will maintain the temperature of an already chilled product. With proper insulation a duct line of up to 450 feet may be ran. Individual ducts could be routed to four separate stations at 63 feet each or 2 stations at 113 feet, etc.

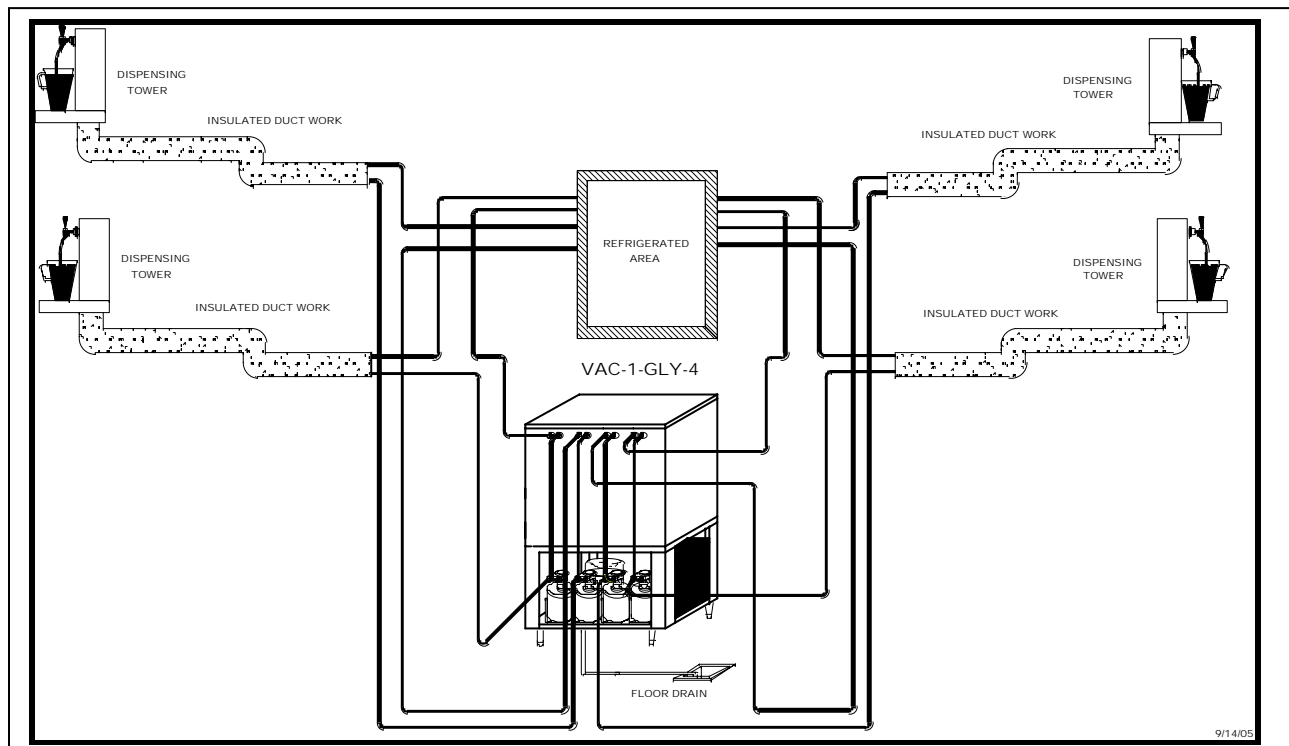

DESIGN DATA

"Specifications"

"Verticle Arctic Chill Glycol"

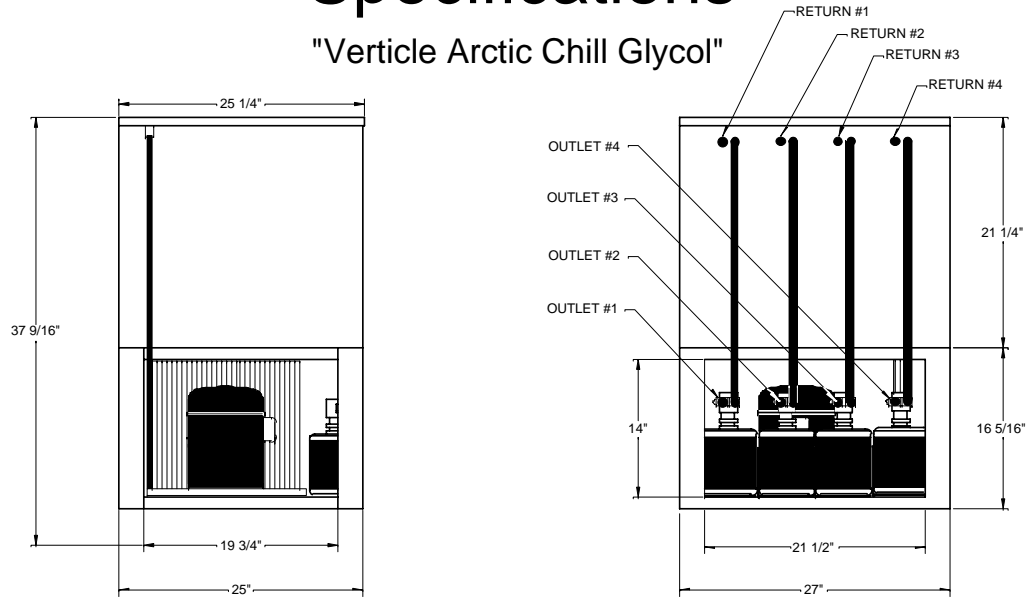


VAC				
	SINGLE	DUAL	TRI	QUAD
HEIGHT	37 9/16	37 9/16	37 9/16	37 9/16
WIDTH	27	27	27	27
DEPTH	25	25	25	25
OPERATIONAL WEIGHT	563	578	593	608
SHIPPING WEIGHT	265	280	295	310
DRY WEIGHT	223	238	253	268
OPERATING VOLTAGE	240 VOLT/SINGLE PHASE	240 VOLT/SINGLE PHASE	240 VOLT/SINGLE PHASE	240 VOLT/SINGLE PHASE
CIRCUIT AMPACITY	10.3	13.6	17	20.3
COMPRESSOR	1 HORSE POWER	1 HORSE POWER	1 HORSE POWER	1 HORSE POWER
CONDENSING UNIT AMPS	7	7	7	7
POWER CORD	DIRECT WIRE	DIRECT WIRE	DIRECT WIRE	DIRECT WIRE
MOTOR, GLY.	1/3 HORSE POWER/6.7 AMPS	1/3 HORSE POWER/6.7 AMPS	1/3 HORSE POWER/6.7 AMPS	1/3 HORSE POWER/6.7 AMPS
PUMP, GLYCOL	50 GPH	50 GPH	50 GPH	50 GPH
CABINET MATERIAL	VINYL/STAINLESS STEEL	VINYL/STAINLESS STEEL	VINYL/STAINLESS STEEL	VINYL/STAINLESS STEEL
GLYCOL CONNECTION	3/8 M.F.	3/8 M.F.	3/8 M.F.	3/8 M.F.
RECOMMENDED RUN LENGTH	450 FEET	450 FEET	450 FEET	450 FEET
WATER BATH GALLONS	41	41	41	41
REFRIG TYPE AND CHARGE	R-134A/341 GRAMS	R-134A/341 GRAMS	R-134A/341 GRAMS	R-134A/341 GRAMS

A MINIMUM OF 2" CLEARANCE REQUIRED AROUND CABINET ON ALL SIDES FOR VENTILATION AND LID REMOVAL.

6/01

"Specifications"


"Horizontal Arctic Chill Glycol"

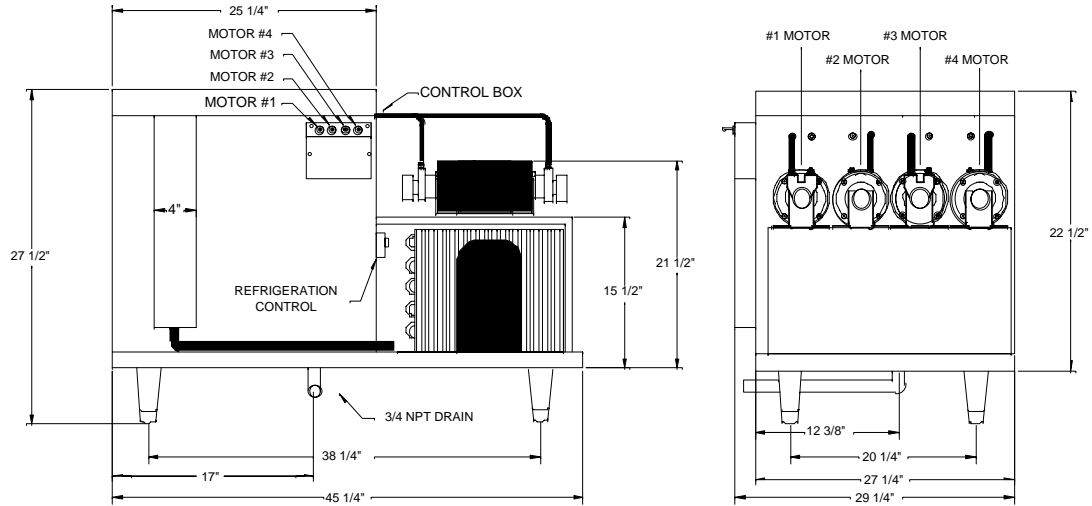

HAC				
	SINGLE	DUAL	TRI	QUAD
HEIGHT	22 1/2	22 1/2	22 1/2	22 1/2
WIDTH	45 1/4	45 1/4	45 1/4	45 1/4
DEPTH	27 1/4	27 1/4	27 1/4	27 1/4
OPERATIONAL WEIGHT	545	560	575	600
SHIPPING WEIGHT	247	262	287	302
DRY WEIGHT	205	220	235	260
OPERATING VOLTAGE	240 VOLT/SINGLE PHASE	240 VOLT/SINGLE PHASE	240 VOLT/SINGLE PHASE	240 VOLT/SINGLE PHASE
CIRCUIT AMPACITY	10.3	13.6	17	20.3
COMPRESSOR	1 HORSE POWER	1 HORSE POWER	1 HORSE POWER	1 HORSE POWER
CONDENSING UNIT AMPS	7	7	7	7
POWER CORD	DIRECT WIRE	DIRECT WIRE	DIRECT WIRE	DIRECT WIRE
MOTOR, GLY.	1/3 HORSE POWER/6.7 AMPS	1/3 HORSE POWER/6.7 AMPS	1/3 HORSE POWER/6.7 AMPS	1/3 HORSE POWER/6.7 AMPS
PUMP, GLYCOL	50 GPH	50 GPH	50 GPH	50 GPH
CABINET MATERIAL	VINYL/STAINLESS STEEL	VINYL/STAINLESS STEEL	VINYL/STAINLESS STEEL	VINYL/STAINLESS STEEL
GLYCOL CONNECTION	3/8 M.F.	3/8 M.F.	3/8 M.F.	3/8 M.F.
RECOMMENDED RUN LENGTH	450 FEET	450 FEET	450 FEET	450 FEET
WATER BATH GALLONS	41	41	41	41
REFRIG TYPE AND CHARGE	R-134A/341 GRAMS	R-134A/341 GRAMS	R-134A/341 GRAMS	R-134A/341 GRAMS

A MINIMUM OF 2" CLEARANCE REQUIRED AROUND CABINET ON ALL SIDES FOR VENTILATION AND LID REMOVAL.

6/01

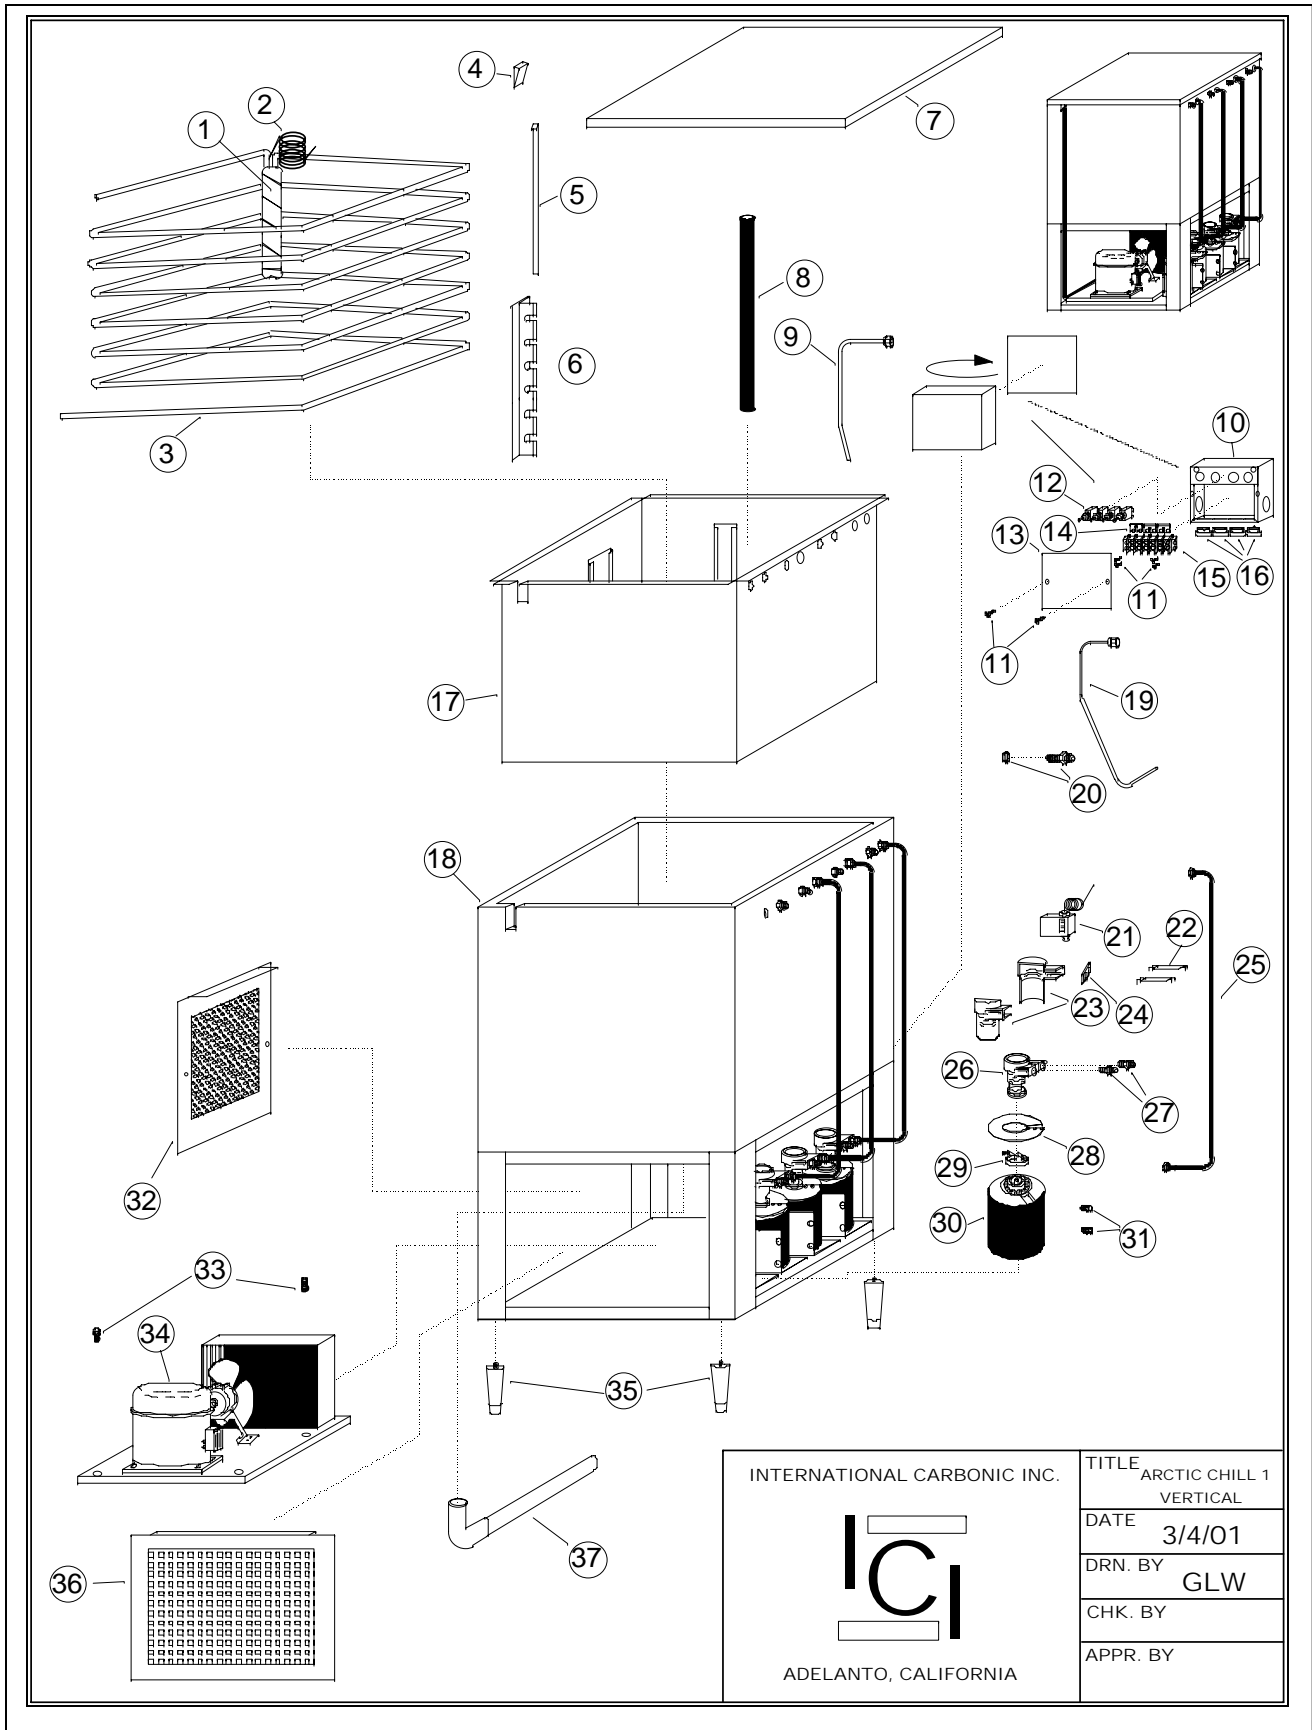

INTERNATIONAL CARBONIC INC.




ADELANTO, CALIFORNIA


TITLE	ARCTIC CHILL 1 VERTICAL
DATE	3/4/01
DRN. BY	GLW
CHK. BY	
APPR. BY	

VERTICAL ARCTIC CHILL GLYCOL

SYM	QTY	PART NO.	DESCRIPTION
1	1	S-409	ACCUMULATOR, 9" VERTICAL
2	1	14' - 1/8 CAP TUBE
3	1	S-1801	EVAPORATOR ASSEMBLY
4	4	S-1323	EVAPORATOR GUIDE WEDGE
5	4	S-1802	EVAPORATOR COIL RETAINER
6	4	S-1803	EVAPORATOR COIL SUPPORT BRKT.
7	1	S-1805	LID WITH INSULATION
8	1	S-1804	STAND PIPE, 20 1/2"
9	1 - 4	S-1806	INTAKE TUBE
10	1	S-1812	CONTROL BOX W/COVER
11	12	A-20	SCREW, 8-32 X 3/8 T.H., S.S.
12	1 - 4	S-866	TOGGLE SWITCH
13	1	S-1813	CONTROL BOX COVER
14	3	S-1814	TERMINAL BLOCK JUMPER
15	1	S-1815	TERMINAL BLOCK, DIRECT WIRE
16	4	S-46	BUSHING
17	1	S-1816	BUCKET COMPLETE
18	1	S-1817	CABINET SHELL ONLY
19	1 - 4	S-1807	DISCHARGE TUBE
20	2 - 8	S-168	CABINET FITTING, SS 3/8 MF X 3/8 MF 1 1/8 TO 2 7/8
21	1	S-86	TEMPERATURE CONTROL, GLYCOL
22	3 - 12	S-665-S	INSULATION KIT STRAP
23	1 - 4	S-665-J	INSULATION KIT JACKET
24	1 - 4	S-665-I	INSULATION KIT INSULATOR
25	1 - 4	S-1808	GLYCOL CHARGING TUBE
26	1 - 4	S-500	GLYCOL PUMP, 50 GPH
27	2 - 8	S-170	HALF UNION, BRASS
28	1 - 4	S-199	MOTOR SHIELD
29	1 - 4	S-106	MOTOR CLAMP
30	1 - 4	S-96	MOTOR
31	2 - 8	A-45	5/16 X 18 FLANGE WHIZ LOCK SCREW, 1/2"
32	1	S-1819	SERVICE PANEL, RIGHT
33	2 - 8	A-46	5/16 X 18 FLANGE WHIZ LOCK SCREW, 3/4"
34	1	AJA4512YXDXD	1 HP CONDENSING UNIT
	1	AJA4512YXD	COMPRESSOR ONLY, 1 HP
35	1 SET	S-854	LEGS
36	2	S-1820	SERVICE PANEL, FRONT AND BACK
37	1	S-489	WATER BATH DRAIN

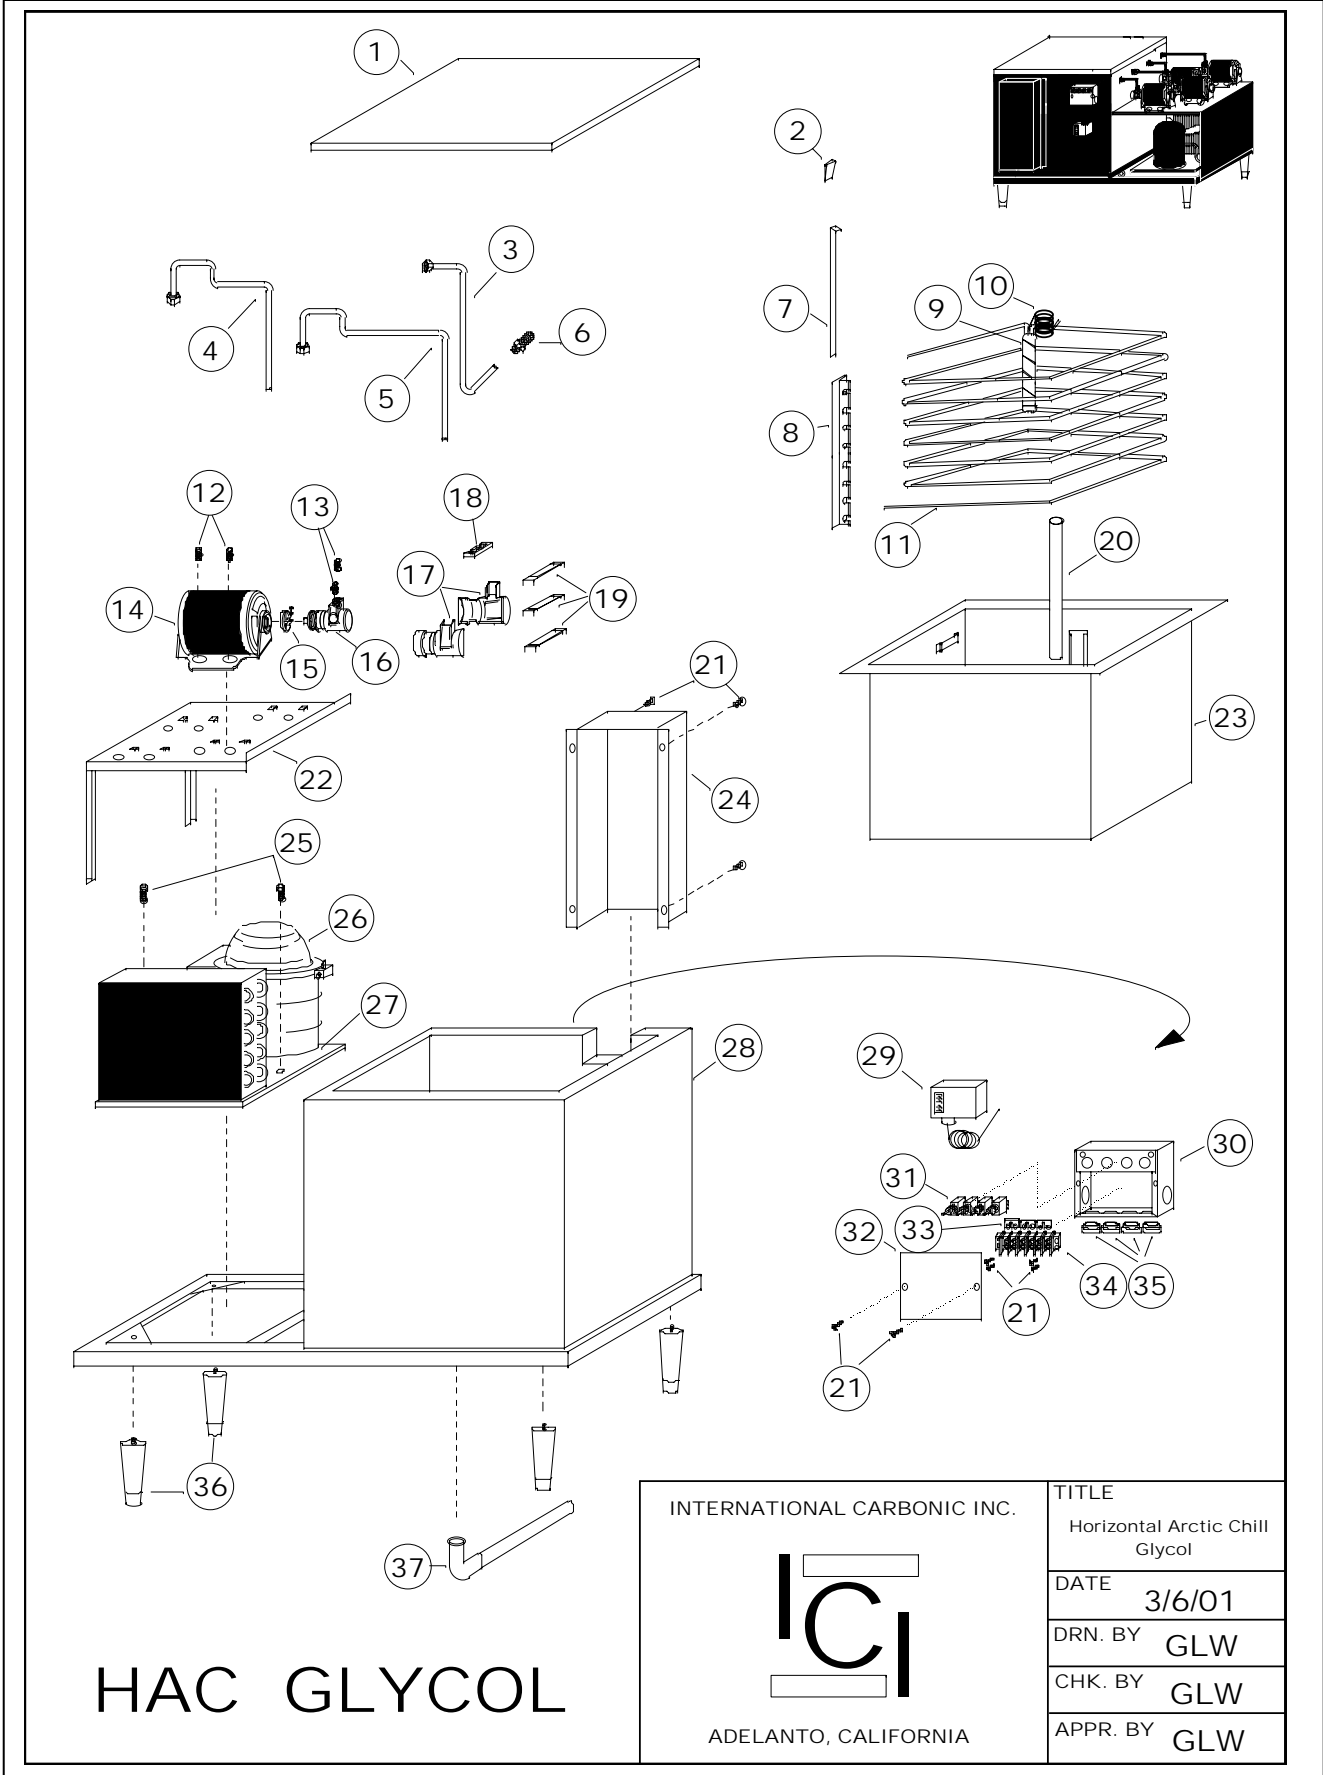

HAC GLYCOL


INTERNATIONAL CARBONIC INC.  ADELANTO, CALIFORNIA	TITLE	Horizontal Arctic Chill Glycol
	DATE	3/6/01
	DRN. BY	GLW
	CHK. BY	GLW
	APPR. BY	GLW

HORIZONTAL ARCTIC CHILL GLYCOL

SYM	QTY	PART NO.	DESCRIPTION
1	1	S-1805	LID WITH INSULATION
2	4	S-1323	EVAPORATOR GUIDE WEDGE
3	1 - 4	S-1807	DISCHARGE TUBE
4	1 - 2	S-1809	INTAKE TUBE, #1 AND #2 MOTOR
5	1 - 2	S-1810	INTAKE TUBE, #3 AND #4 MOTOR
6	1 - 4	S-168	CABINET FITTING, SS 3/8 MF X 3/8 MF 1 1/8 TO 2 7/8
7	4	S-1802	EVAPORATOR COIL RETAINER
8	4	S-1803	EVAPORATOR COIL SUPPORT BRKT.
9	1	S-409	ACCUMULATOR, 9" VERTICAL
10	1	14' - 1/8 CAP TUBE
11	1	S-1801	EVAPORATOR ASSEMBLY
12	2 - 8	A-45	5/16 X 18 FLANGE WHIZ LOCK SCREW, 1/2"
13	2 - 8	S-170	HALF UNION, BRASS
14	1 - 4	S-96	MOTOR
15	1 - 4	S-106	MOTOR CLAMP
16	1 - 4	S-500	GLYCOL PUMP, 50 GPH
17	1 - 4	S-665-J	INSULATION KIT JACKET
18	1 - 4	S-665-I	INSULATION KIT INSULATOR
19	3 - 12	S-665-S	INSULATION KIT STRAP
20	1	S-1804	STAND PIPE, 20 1/2"
21	10	A-20	SCREW, 8-32 X 3/8 T.H., S.S.
22	1	S-1822	MOTOR MOUNTING PANEL
23	1	S-1816	BUCKET COMPLETE
24	1	S-1824	REAR LINE COVER
25	2 - 8	A-46	5/16 X 18 FLANGE WHIZ LOCK SCREW, 3/4"
26	1	AJA4512YXD	COMPRESSOR ONLY, 1 HP
27	1	AJA4512YDXD	1 HP CONDENSING UNIT
28	1	S-1817	CABINET SHELL ONLY
29	1	S-86	TEMPERATURE CONTROL, GLYCOL
30	1	S-1812	CONTROL BOX W/COVER
31	1 - 4	S-866	TOGGLE SWITCH
32	1	S-1813	CONTROL BOX COVER
33	3	S-1814	TERMINAL BLOCK JUMPER
34	1	S-1815	TERMINAL BLOCK, DIRECT WIRE
35	4	S-46	BUSHING
36	1 SET	S-854	LEGS
37	1	S-489	WATER BATH DRAIN

ARCTIC CHILL 1


ELECTRICAL SCHEMATIC 230/208-60-1

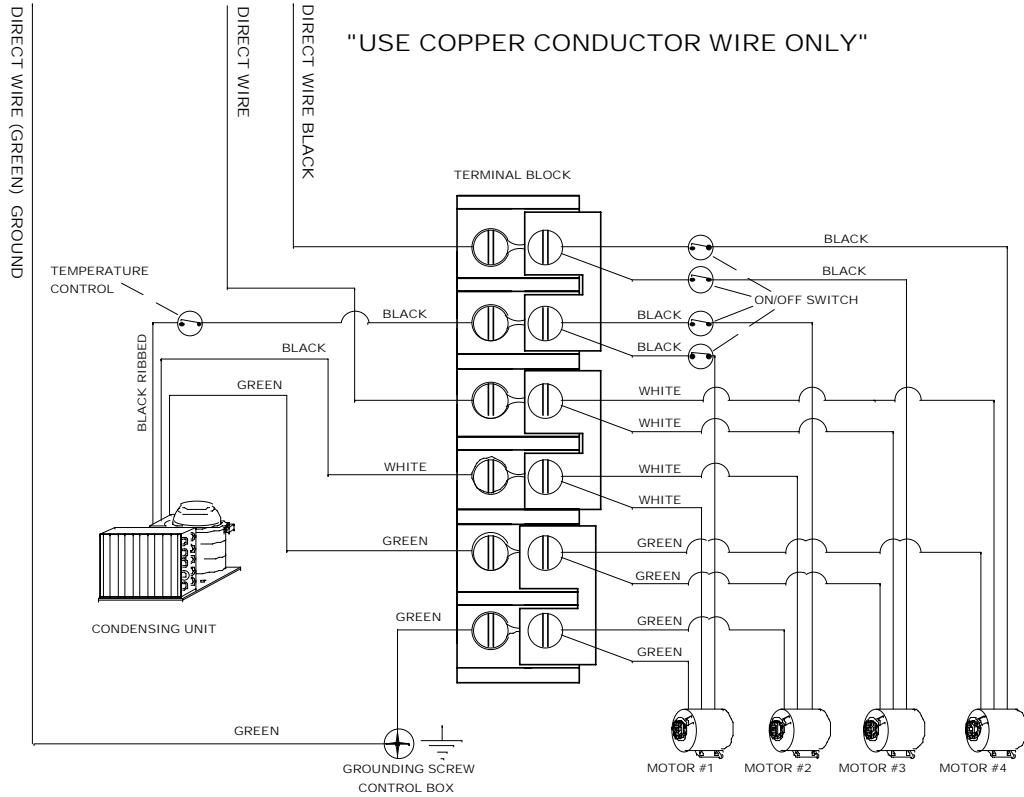

**ELECTRICAL FIELD WIRING
AND INSTRUCTIONS
CONDENSING UNIT**

1. SPLICE INCOMING POWER LEADS, FROM DISCONNECT SWITCH, TO STRIPPED LEADS IN THIS ENCLOSURE.
2. INCOMING POWER LEADS MUST BE COPPER CONDUCTORS ONLY.
3. CONNECT INCOMING GROUND LEAD TO GREEN GROUND SCREW.
4. WHEN T.P.CO. APPROVED ALTERNATE RELAY IS USED. CONNECT LEADS TO SAME NUMBERED TERMINALS, REGARDLESS OF LOCATION.
5. A JUMBER WIRE MAY BE CONNECTED BETWEEN #4 & #6 TERMINALS TO DISTRIBUTE WIRES FOR EASE OF WIRING. THE #4 AND #6 TERMINALS ARE WIRING TERMINALS WITH NO INTERNAL CONNECTION TO RELAY.

AJA4512YDXD

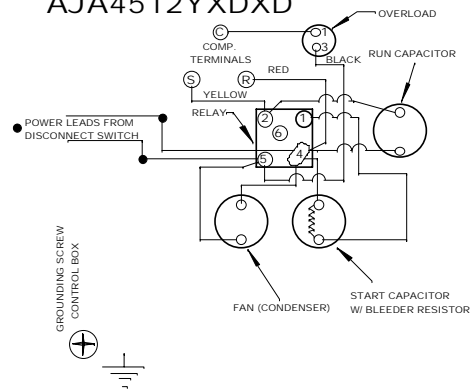

CHAPTER II INSTALLATION

AC-1-GLY

This chapter covers unpacking and inspection, selecting location, installing ARCTIC CHILL GLYCOL, AC-1-GLY and related components, and electrical requirements.

UNPACKING AND INSPECTION

Upon receiving unit, immediately remove AC-1-GLY from shipping carton and inspect for shipping damage.

NOTE: Before leaving the factory the ARCTIC CHILL GLYCOL was carefully inspected and the carrier has accepted and signed for it. Any damage or irregularities should be noted at the time of delivery and immediately reported to delivering carrier. Request a written inspection report from claims inspector to substantiate any necessary claim. File claim with delivering agency, not International Carbonic Inc.!

SELECTING LOCATION

IMPORTANT: Ambient temperature for cooling unit should not exceed 100 degrees "F". Operation of cooling unit in ambient temperatures above 100 degrees "F" can and will contribute to early failure of condensing unit and poor duality of finished product.

LOCATION RECOMMENDATIONS FOR ARCTIC CHILL GLYCOL, AC-1-GLY

1. Position unit as close as possible to proper electrical source, 115V 60Hz.
2. Position unit with a minimum of 2" space between bulkhead and cabinet for sufficient space for ventilation. Allow enough space between ceiling and unit for lid removal.

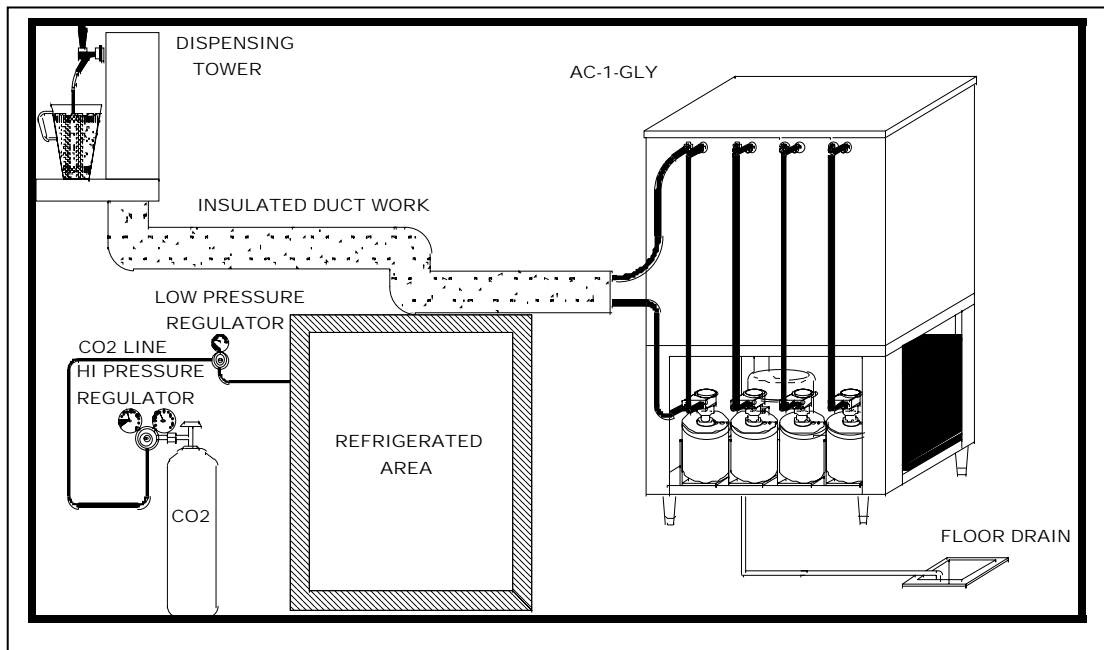


FIGURE 6 SAMPLE OF POSSIBLE INSTALLATION.

3. Position unit as close as possible to Cooler, within ten feet.
4. Position unit as close as possible to floor drain.
5. For best possible operation keep distance from AC-1-GLY to dispensing station(s) as short as possible.

INSTALLATION

INSTALL COOLING UNIT

1. Make all connections:
2. Place COOLING UNIT in position. Make sure sufficient space between bulkheads, walls, and overheads is available for proper ambient temperature and air circulation around cooling unit.

INSTALL C02 PRESSURE REGULATOR, C02 CYLINDER AND LINES

1. Install high pressure C02 regulator, (S-101), on C02 cylinder using a new seal gasket.

NOTE: MAKE SURE NEW WASHER IS INSIDE REGULATOR ASSEMBLIES COUPLING NUT BEFORE CONNECTING TO CYLINDER.

WARNING: To avoid personal injury and/or property damage, always secure C02 cylinder with safety chain, to prevent cylinder from falling. Should C02 cylinder fall, valve could become accidentally damaged or broken off. It is recommended that the C02 cylinder is installed away from heavily traveled areas such as doors, passageways, corridors, etc.

2. Connect 1/4" inner braided plastic tubing from outlet of high pressure C02 regulator, (S-101), on C02 cylinder to Tee connection at secondary low-pressure regulator.
3. From low-pressure regulator route plastic tubing to connection keg or container.

NOTE: If only installing high-pressure regulator connect plastic tubing from outlet on high-pressure regulator to connection on keg or container

INSTALL DRAIN LINE

1. Connect drain line on AC-1-GLY unit with drain using 3/4" PVC tubing to nearest floor drain.
2. Do not reduce drain connection from cabinet outlet.
3. Be sure all connections are watertight.

INSTALL DISPENSING STATION/S

Installation Instructions for dispensing station provided with the dispensing station.

INSTALL DUCT TUBING

6. Route duct tubing to dispensing station(s) location using shortest route possible.
7. Connect dispensing station end of duct tubing to corresponding lines in dispensing station. See Installation Instructions for dispensing station.

8. It is imperative that after all connections are made secure and tested for leak integrity the assorted lines of tubing be bundled and then insulated. It is recommended that an insulation tubing with $\frac{3}{4}$ " walls minimum be used for this purpose.

9. If duct tubing is routed through a chase or transits it is recommended to seal both ends of chase or transits with a sealing compound. It is important not to allow water or other contaminants in the chase or transit. If this does occur it is possible and highly probable that an off taste will be imparted to all dispensed products. If the duct tubing is routed above ground, the duct tubing should be installed in a manor that it is above the floor level to facilitate cleaning.

ELECTRICAL REQUIREMENTS

The ARCTIC CHILL GLYCOL requires a 230/208 VAC, single phase, 60-Hertz power circuit & must be wired in accordance with NEC or local ordinance.

NOTE: Check CHAPTER I for running amperage and connect to appropriate electrical circuit.

CHAPTER III

PREPARATION

AC-1-GLY

All steps in previous chapters should be understood and carried out before proceeding.

PREPARING SYSTEM FOR OPERATION

Be sure that electrical power is unplugged, valve on CO₂ cylinder is closed, and release pressure of CO₂ gas.

PREPARING AND STARTING REFRIGERATION UNIT

1. ARCTIC CHILL GLYCOL refrigeration is pre-set at factory and ready to operate.
2. Remove lid.
3. Fill glycol bath with clean water and glycol until desired percentage of glycol is achieved. The average mixture of water to glycol is approximately 50%. Glycol bath should be filled until solution level reaches drain standpipe, (S-1804). 20.5 gallons of water and 20.5 gallons of glycol.

NOTE: IT IS RECOMMENDED THAT A LOW-MINERAL-CONTENT OR DISTILLED WATER BE USED IN BATH. WITH A 20% SOLUTION OF GLYCOL, ICE CRYSTALS WILL START FORMING AT APPROXIMATELY 19 DEGREES "F". NORMAL GLYCOL SOLUTIONS WILL BE 1 PART GLYCOL TO 1 PART WATER, WHICH WILL RESULT IN A 50% GLYCOL SOLUTION.

4. Make sure all power switches are switched off. Activate power to AC-1-GLY. Make sure nothing on AC-1-GLY comes on. Switch on condensing unit (rocker) switch. Make sure compressor and condenser fan motor start. Switch on pump motor (toggle) switch. Make sure pump motor starts. When pump motor is activated the solution in the glycol bath will fill tubing in duct line lowering the level of the solution bath. Once all tubing has been filled and lowest level is reached in solution bath, shut off pump motor.

NOTE: IF ABOVE ITEMS DID NOT FUNCTION PROPERLY DEACTIVATE POWER TO UNIT. OPEN ELECTRICAL CONTROL BOX AND COMPARE WIRING WITH GLYCOL WIRING SCHEMATIC. CORRECT WIRING AND REPEAT ABOVE STEP NUMBER 4. IF STILL NOT FUNCTIONING PROPERLY CONTACT YOU'RE LOCAL SERVICE AGENCY.

5. Re-fill glycol bath with a 50/50 solution of glycol and water until solution level is just below S-1804 standpipe.
6. Activate pump motor.
7. The process of cooling the solution bath and solution in duct tubing will commence at initial start up. With ambient and glycol temperature of 75 degree "F", initial pull down from 75 degrees to 32 degrees, will take approximately 5 to 6 hours for the glycol bath only. When desired glycol bath temperature has been reached, compressor and condenser fan motor will stop. Circulating pump motor will continue to operate, circulating the glycol solution in bath, and duct tubing. Pull down time will vary depending on length of duct tubing.

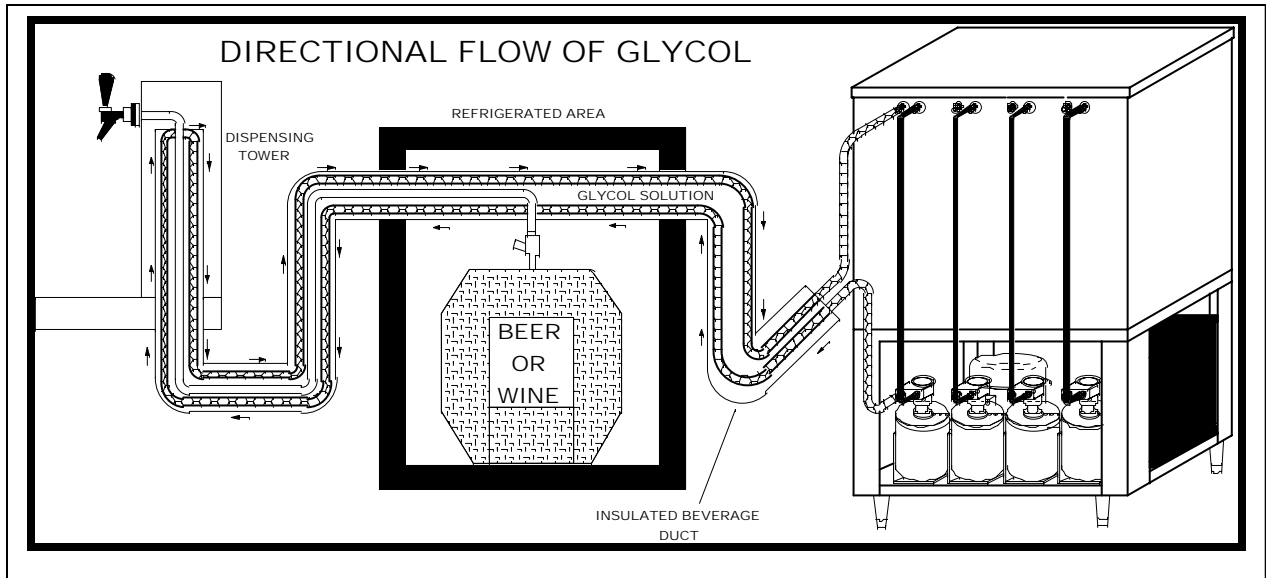


FIGURE 7 DIRECTIONAL FLOW OF GLYCOL SOLUTION

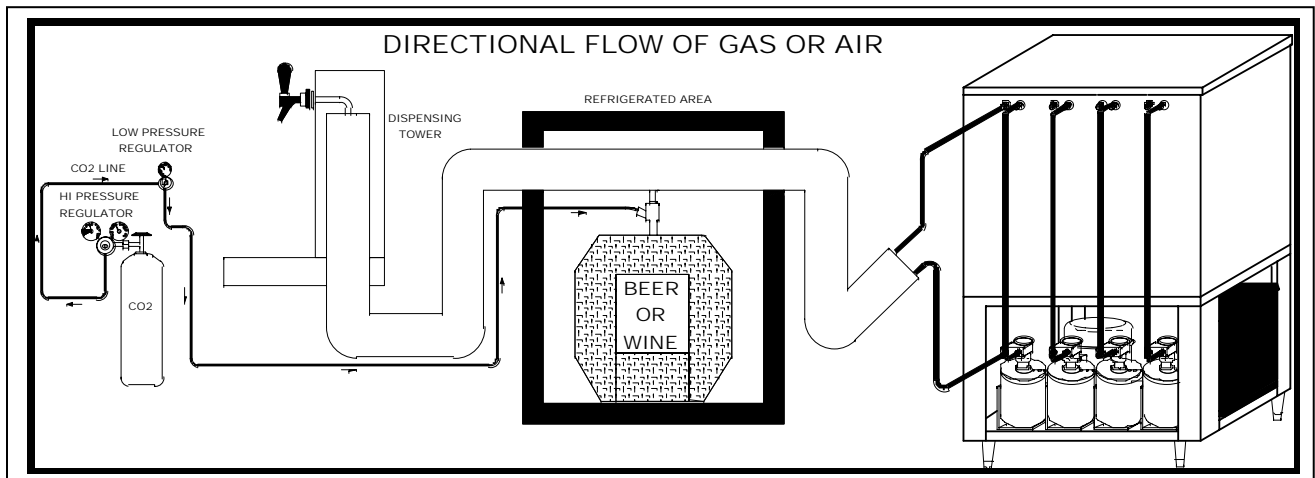


FIGURE 8 DIRECTIONAL FLOW OF CO2 GAS


ACTIVATE HIGH PRESSURE CO2 SYSTEM

1. Open valve on the CO2 cylinder. Be sure to open valve completely or until valve is back seated.
2. Turn high pressure CO2 regulator, screw clockwise until the desired pressure is reached for applicable beverage.
3. Check all connections on high pressure CO2 system for leaks.
Repair any leaks that are found.

ACTIVATE LOW PRESSURE CO2 GAS (If applicable).

1. Make sure high pressure CO2 regulator pressure is set for application.
2. Adjust low-pressure regulator clockwise until the desired pressure is reached for applicable beverage.

3. Check all connections on low pressure CO2 system for leaks. Repair any leaks that are found.
4. Make sure all Q.C.D.1s, are in an operational position.

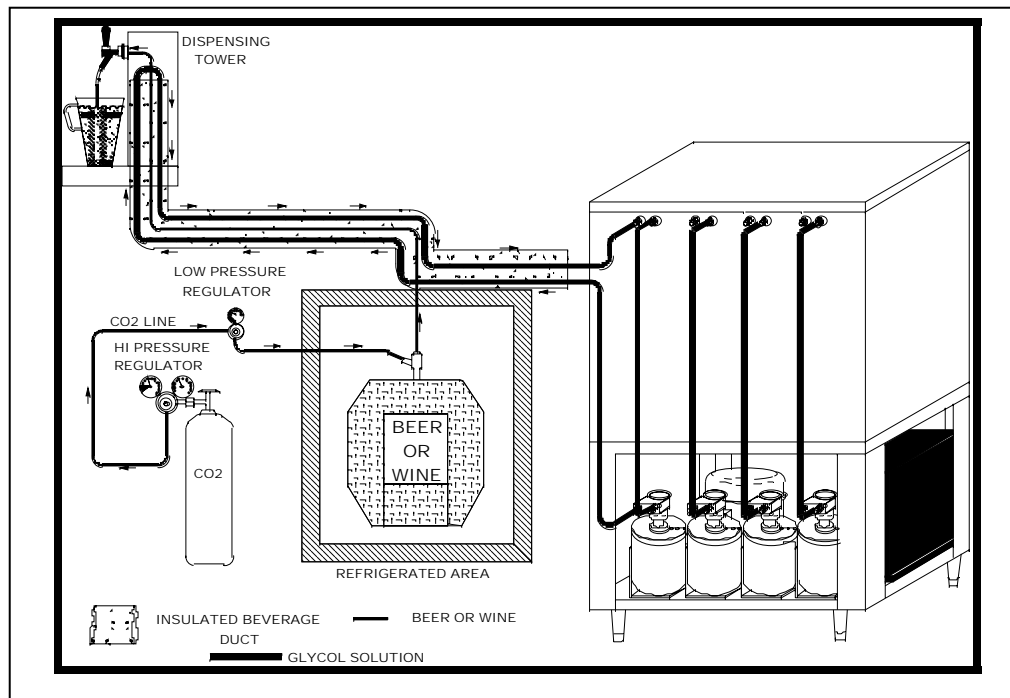

PURGE DISPENSING STATION

1. Dispense product from dispensing station until all air is purged from duct beverage lines.

ADJUST DISPENSING FAUCET FLOW RATE

1. Adjust dispensing valve flow rate as instructed in dispensing station Installation Instructions.

ADJUST SIZE OF DRINK DISPENSED

1. Adjust size of drink dispensed as instructed in dispensing station Installation Instructions.

CHAPTER IV

OPERATORS INSTRUCTIONS

AC-1-GLY

This chapter covers operator's responsibilities for daily pre-operation check, adjustments, replenishing C02 and cleaning, and sanitizing.

DAILY PRE-OPERATION CHECK

1. Make sure high-pressure C02 regulator's pound per square inch indicator is not in shaded portion of dial. If so, C02 cylinder is almost empty and must be replaced.

NOTE: Readings should be taken at normal room temperature, approximately 70 degrees "F". If C02 cylinder is stored in a walk-in refrigerator, the PSI indicator will read below 500 PSI even when cylinder is full.

2. Make sure there is a sufficient beverage supply refrigerated and ready to dispense.

REPLENISHING C02 SUPPLY

C02 supply must be checked daily and if necessary, replenished as instructed (see CHAPTER II).

NOTE: When pound per square inch indicator of high-pressure C02 regulator on C02 cylinder is in shaded portion of the dial, C02 cylinder is almost empty and should be changed.

COOLING UNIT MAINTENANCE

To avoid needless and sometimes costly repairs, it is imperative to keep condenser fins clean. See cleaning condenser coil section in chapter 5.

NOTE: Air circulation through the condenser coil required to cool the condenser coil/compressor is drawn in through grills on VAC-1-GLY unit, through condenser coil and is exhausted out grills on the other side of the unit. On HAC-1-GLY unit air is drawn in through condenser coil and exhausted over compressor. Restricting air circulation through the cooling unit will decrease its cooling capacity.

CHECKING GLYCOL BATH

Periodically check glycol solution level in bath. If it is low a combination of water/glycol should be added as instructed for maximum product cooling. This dehydration will normally not occur in normal temperate climate zones. With normal humidity the opposite will occur therefore it is paramount that the condensate drain be installed.

CHANGING GLYCOL BATH

Drain glycol bath a minimum of twice a year. This can be accomplished by locating the standpipe (S-1804) in the glycol bath area and removing by twisting and pulling up. Once glycol solution has been drained, replace standpipe and refill with water. Turn on glycol pump to flush out glycol lines. Wait 30 minutes. Turn off glycol pump. Clean inside of bath area, walls, glycol intake and discharge tubes, evaporator coil, etc. Pull standpipe and allow water to drain. Once water has been drained, replace standpipe and refill with desired proportion of water and glycol. Fill glycol bath to top of standpipe (S-1804).

ADJUSTMENTS

Periodically C02 regulators should be checked for proper pressure settings and if necessary, adjusted as instructed. These settings can be recorded in NOTE section of this manual.

TESTING FOR LEAKS

1. Completely back off adjusting screw on low pressure CO2 regulator.
2. Close valve on top CO2 cylinder.
3. Wait for 5 minutes or more. If pressure on high pressure gauge decreases excessively, there is leak in the high-pressure circuit.
4. All connections including cylinder valve should be coated with a soap solution. If bubbles appear a leak is apparent.
5. Always be sure that the low pressure adjusting screw is completely backed off before testing high-pressure circuit for leaks. Otherwise, gas going into tanks would cause this high pressure gauge needle to balance with pressure in tanks, which would be a false indication of a leak in the circuit.
6. After it has been determined that there are no leaks in the high pressure circuit, open CO2 cylinder valve and adjust low pressure regulator to 15 psi. Allow enough time for the tanks to fill completely with gas. (5 minutes or longer).
7. Next, completely back off low-pressure regulator adjusting screw, and if gauge needle of low-pressure regulator commence to move downward, there is leak in the low-pressure circuit. Check all connections with a soap solution, paying particular attention to product tank fittings. If low pressure gauge needle remains stationary, there is no leak.

CHAPTER V

SERVICE AND MAINTENANCE

This chapter describes service and maintenance procedures to be performed on ARCTIC CHILL GLYCOL remote systems and related components.

PERIODIC INSPECTION AND CLEANING Daily:

1. Clean any storage tanks/BIB racks, and general storage area with warm water.
2. Check the C02 gas supply. If cylinder pressure is below 500 PSI, replace the cylinder.

NOTE: Readings should be taken at normal room temperature, approximately 70 degrees "F" and above. If C02 cylinder is stored in a walk-in refrigerator, the PSI indicator will read below 500 PSI even when cylinder is full.

3. Check the C02 gas pressure supplying cooled beverage. These pressures should not change. If a change occurs repeatedly, contact your local service agency. It is suggested to make a comment about this occurrence in NOTE SECTION of manual.
4. Clean the beverage dispensing area.
5. Remove and clean nozzles and all exposed areas of dispensing faucets.
6. Wipe exterior of unit with moist towel.

Weekly:

1. Order product to maintain product inventory.
2. Check all C02 gas connections for leaks.
3. Check condenser coil for obstructions or dirt.

Monthly:

1. Clean condenser fins or filter to ensure the refrigeration unit has adequate airflow.
2. Inspect components of cooling unit glycol bath for cleanliness.
3. Check entire system for leaks or damaged components. Repair as necessary.

COOLING UNIT MAINTENANCE

PERIODIC CLEANING

Periodically wash all external surfaces of AC-1-GLY unit, rinse with clean water, and then wipe dry with a clean soft cloth. DO NOT USE ABRASIVE TYPE CLEANERS.

CLEANING CONDENSER COIL

IMPORTANT: Air circulation through the condenser coil is required to cool the condenser coil/compressor. Air is drawn in through grills on the VAC-1-GLY unit, through condenser coil and exhausted out grills on the other side of unit. On HAC-1-GLY unit air is drawn in through condenser coil and exhausted over compressor. Restricting air circulation through the cooling unit will decrease its cooling capacity, and shorten the life of the compressor.

NOTE: Cleaning condenser coil should be done during non-use periods.

1. De-energize electrical supply to AC-1-GLY unit.
2. Remove 8 screws securing service panels (VAC-1-GLY only), 2 screws per service panel. Remove panels in preparation for service.
3. Vacuum or use a soft brush to clean fins of condenser coil. Use low-pressure compressed air or CO₂ gas to blow through condenser fins. This should only be performed after normal business hours to prevent dust contamination. A damp cloth on backside of condenser coil will prevent some dust contamination.
4. Replace service panels and secure with screws, 2 per panel.
5. Energize electrical supply to AC-1-GLY unit.

CHECKING GLYCOL BATH

Periodically check glycol solution level in bath. If it is low, more solution should be added for maximum product cooling. Before adding more solution, glycol bath and evaporator should be checked for excessive mineral deposit build up.

1. Unplug AC-1-GLY unit power cord from electrical socket.
2. Lift lid up and off unit.
3. Look down into glycol bath (use flashlight, if necessary) and inspect glycol bath, and all components for cleanliness. Glycol bath and all components should be clear and free of foreign particles.
4. If cleaning of glycol bath or its components is necessary, do it as outlined in "CHANGING GLYCOL BATH" in this chapter.
5. Fill glycol bath to top of standpipe (S-1804), with desired proportion of glycol solution.

NOTE: IT IS RECOMMENDED LOW-MINERAL-CONTENT OR DISTILLED WATER IS USED TO FILL GLYCOL BATH IN ADDITION TO PROPER RATIO OF GLYCOL.

6. Install lid.
7. Energize electrical supply to AC-1-GLY unit.

CHANGING GLYCOL BATH

NOTE: The glycol solution in bath should be changed and all components in bath should be cleaned as often as necessary to keep it clean. A convenient time to perform this operation is when the system is being sanitized.

1. De-energize electrical supply to AC-1-GLY unit, and switch off all switches on unit.
2. Remove lid from glycol bath.
3. Look down into glycol bath (if necessary, use flashlight) and inspect bath, evaporator and all components for cleanliness. Glycol solution, evaporator, and all components should be clear and free of foreign particles.
4. Pull out standpipe and allow solution to drain.
5. Once glycol solution has drained, replace standpipe and refill bath with water (no glycol).
6. Plug AC-1-GLY unit power cord into proper electrical socket.
7. Switch on pump motor/s and allow water to flush out glycol lines, repeat until solution appears clean.
8. Switch off pump motor/s, and unplug AC-1-GLY unit.
9. Use fiber brush and carefully clean mineral deposit from all components in bath.
10. Pull standpipe and allow solution to drain.
11. Wash evaporator coil with a mild soap solution. Copper cleans well with mild solution of citric acid (1 cup of citric acid for 2 gallons of water). Stainless steel cleans well with carbonated water.
12. Rinse out bath with clean water until water running out of drain is clean.
13. Install standpipe in drain.
14. Fill bath to top of standpipe (S-1804) with proper proportion of glycol/water solution.

NOTE: IT IS RECOMMENDED LOW-MINERAL-CONTENT OR DISTILLED WATER IS USED TO FILL GLYCOL BATH.

15. Energize electrical supply to AC-1-GLY unit.
16. Switch on pump motor/s
17. Wait approximately 10 minutes for glycol lines to fill completely with Glycol solution.
18. Refill bath to top of standpipe (S-1804) with proper proportion of glycol/water solution
19. Install lid.
20. Switch on condensing unit.

GLYCOL PUMP REPLACEMENT

1. De-energize electrical supply to AC-1-GLY unit.
2. Remove lid.
3. Remove 8 screws securing service panels (VAC-1-GLY only), 2 screws per service panel. Remove panels in preparation for service.
4. Remove inlet and outlet lines from 50 GPH pump (S-500). It may be necessary to cap inlet and outlet lines to prevent a siphon effect for the glycol solution in the duct lines.

5. Loosen and remove S-106 "V" band clamp holding pump to motor.
6. Replace defective S-500 pump with new pump.
7. Secure with "V" band clamp.
8. Install inlet and outlet lines to pump.
9. Energize electrical supply to AC-1-GLY unit
10. Switch on pump motor/s and ensure they are functioning properly with no leaks.
11. Switch on condensing unit.
12. Secure service panels with 2 screws per panel (VAC-1-GLY only).
Replace lid on glycol bath.

LUBRICATION

Glycol pump motors bearings must be oiled periodically. Refer to oiling instruction on motors. DO NOT OVER OIL.

ADJUSTMENTS

C02 PRESSURE REGULATOR

The high-pressure C02 regulator will have two gages, which extend above and to the side of the bell housing screw area. The PSI gauge will show graduated indications up to 3000 psi and be the gauge the farthest from the C02 cylinder connection. This gauge will normally have a Red area indicating 0 psi to 500 psi. This gauge will be used to check volume of liquid in the C02 cylinder. The other gauge will show regulated pressure, which will be delivered, to a low-pressure regulator. This gauge can be indicated from 0-160 psi up to 0-300 psi. By turning the high-pressure regulator adjustment screw clockwise we will increase pressure supplied to the high-pressure circuit that will be indicated on this gauge. By turning the low-pressure regulator adjustment screw clockwise we will increase pressure supplied to the low-pressure circuit (supplies product containers), which will be indicated by the gauge on the low-pressure regulator.

NOTE: When adjusting C02 pressure regulator a setting of approximately 6 to 12 lbs PSI is recommended for beer and wine.

LOW PRESSURE C02 REGULATOR

The low pressure C02 regulator setting can and will vary dramatically from one installation to the next. Variables such as distance from product containers to point of serving, horizontal or vertical runs, baume of products will influence where the low-pressure regulator is adjusted.

NOTE: These pressures could be recorded in the note section of this manual.

A good starting point as an adjustment is a few pounds higher than that of the racked pressure of your dispensed product. Example the racked setting for Coors is 14 lbs. PSI where the racked pressure of Budweiser is 18 lbs. PSI.

NOTE: After primary adjustment on low-pressure regulator has been performed always go to farthest serving station from product storage area and adjust for flow. If adjustment is necessary proceed with all other serving stations.

REPLENISHING C02 SUPPLY

1. Close empty C02 cylinder shutoff valve.

2. Disconnect high-pressure CO2 regulator, and then remove empty CO2 cylinder
3. Install full CO2 cylinder and connect high pressure CO2 regulator. See installation procedure in CHAPTER II.

NOTE: 1 MAKE SURE CO2 CYLINDER IS POSITIONED IN UPRIGHT POSITION AND FASTENED WITH SAFETY CHAIN. ALWAYS OPEN CO2 VALVE COMPLETELY OR UNTIL BACK SEATED DURING OPERATION. WHEN BOTTLE IS EMPTY ALWAYS CLOSE VALVE ASSEMBLY COMPLETELY.

CHAPTER VI

TROUBLE SHOOTING

IMPORTANT: Only qualified personnel should service AC-1-GLY unit and components.

WARNING: To avoid personal injury and or property damage, always disconnect electrical power, shut off CO2 supplies before starting any repairs. Bleed any pressure on any line to be worked on.

COOLING UNIT

Trouble		Probable Cause		Remédies
GLYCOL PUMP MOTOR WILL NOT OPERATE	1.	Inoperable glycol pump/ motor.	1.	Replace glycol pump/ motor.
	2.	Overheated motor (cut off by thermal overload protector).	2.	Check for proper line voltage. Allow motor time to cool.
	3.	Loose electrical connection and/or open electrical circuit.	3.	Tighten connection and/or repair open circuit. Check line voltage.
GLYCOL PUMP CAPACITY TO LOW	1.	Volume to low in glycol supply line.	1.	Increase diameter of supply line.
	2.	Glycol pump worn out.	2.	Replace glycol pump.
	3.	Kinked or restricted glycol supply line.	3.	Clean restricted or straighten glycol supply line.
	4.	Foreign object in glycol pump or restriction to glycol pump.	4.	Clear restrictions and check pump for debris.
Frozen Glycol bath	1.	Bad temperature control.	1.	Replace bad temperature control.
	2.	Glycol solution has become diluted due to condensation.	2.	Replenish w/proper portion of glycol.
Cooling or condensing unit non-operational	1.	No electrical power.	1.	Check Circuit Breaker or fuse.
	2.	Defective ice bank control.	2.	Replace temperature control.
	3.	Dirty condenser unit.	3.	Clean condenser unit w/vacuum cleaner.
	4.	Improper voltage/amperage	4.	Check for proper voltage/ amperage.
	5.	Loss of refrigerant.	5.	Repair leak and replenish refrigerant.
	6.	Bad overload and relay.	6.	Replace overload and relay
	7.	Compressor bad.	7.	Replace compressor.
	8.	Restriction (pinched or crimped line).	8.	Repair, straighten or replace defective line.

Compressor does not operate	1.	No power source.	1.	Check Circuit Breaker or fuse. Check line voltage.
	2.	Electrical power to cooling unit turned off.	2.	Turn on power switch to unit.
	3.	Low voltage.	3.	Voltage must be at least 208 V at compressor terminals at start.
	4.	Loose, disconnected, or broken wire.	4.	Tighten connection or replace broken wiring.
	5.	Inoperative temperature control.	5.	Replace temperature control.
	6.	Inoperative overload protector or start relay.	6.	Replace defective part.
	7.	Inoperative compressor.	7.	Replace compressor.
	8.	Glycol temp satisfied.	8.	Refrigeration not called for.

Compressor works continuously but does not cool sufficiently	1.	Cooling capacity is exceeded by over drawing.	1.	Reduce amount of drinks taken per given time or install higher volume unit.
	2.	Cooling unit located in excessively hot area.	2.	Relocate cooling unit.
	3.	Air circulation through condenser coil is restricted	3.	Check and if necessary, clean condenser coil.
	4.	Loss of refrigerant or in-sufficient charge.	4.	Repair leak and/or recharge with sufficient refrigerant.

Note: Ice bank freezes from bottom of evaporator upward. A refrigerant leak or insufficient charge might show ice at bottom and not at top of evaporator.

Compressor will not stop after sufficiently cooling glycol solution	1.	Ice bank control capillary tube kinked or broken.	1.	Replace ice bank control.
	2.	Ice bank control stuck in closed position.	2.	Replace ice bank control.

Note: During overload protector shut off condenser fan motor will continue to work. Otherwise, troubleshooting condenser fan motor problems is the same, as "Compressor does not operate", paragraph in addition to the following.

Condenser fan motor not operating	1.	Electrical cord loose or disconnected from condenser fan motor or compressor terminals.	1.	Tighten connections or replace cord.
	2.	Fan blade obstructed.	2.	Remove obstruction.
	3.	Inoperative condenser fan motor.	3.	Replace condenser fan motor.

SELECTING LOCATION

IMPORTANT: Ambient temperature for cooling unit should not exceed 100 degrees "F". Operation of cooling unit in ambient above 100 degrees "F" can and will contribute to early failure of condensing unit and poor quality of finished product.

